



Anything else is simply not **Optimum**®



OPT -PC-12-KIT
TEMPERATURE SENSOR
WATER/AIR/SOLAR
10K Ω Temperature Sensor

IMPORTANT NOTE: DO NOT overtighten pipe clamp.

APPLICATION:

Temperature sensor used with the Aqualogic®, AquaRite®, AquaTrol®, Pool/Spa solar heating controls (GL-235, Aqua Solar), Solar water heating controls Models: GL-30, GL-235 LV, GL-235 LV/HV, AQ-SOL-LV and AQ-SOL-LV-TC, Setpoint temperature controls (SP-xx) and temperature displays Hayward®/Goldline® PC-10k Systems.

This sensor may be used as a **Water**, **Air**, or **Solar** sensor.

REPLACEMENT KIT (for P/N 520272) INCLUDES:

<u>QTY.</u>	<u>DESCRIPTION</u>
1	Temperature Sensor, 10K, 15ft. w/ o-ring
1	Extra o-ring (optional for installation)

INSTALLATION:

Water Temperature Sensor Replacement

1. Find the old water sensor located in the plumbing between the filter pump and the filter. Remove old sensor and position the hose clamp over the new sensor, and gently tighten around pipe.

Caution: Do not overtighten clamp.

2. Feed the cable up through the low voltage compartment of the Load/Power Center to the Control Panel. Connect Sensor wires to WATER screw terminals.

Solar Temperature Sensor

1. For unglazed panels, fasten Sensor next to solar panels. For glazed panels, suspend Sensor between collector and glazing.
2. Feed the cable up through the low voltage compartment of the Load/Power Center to the Control Panel. Connect Sensor wires to SOLAR screw terminals.

Ambient Air Temperature (Freeze Protection) Sensor

1. Mount sensor in open air, in shaded area, away from air conditioners. Feed the cable up through the low voltage compartment of the Load/Power Center to the Control Panel, fastening to plumbing with cable ties. Connect Sensor wires to AIR screw terminals.